


Selection of sensor type

Power on the thermostat.


With the front off, with a small screwdriver, pencil, or needle press the installation button.

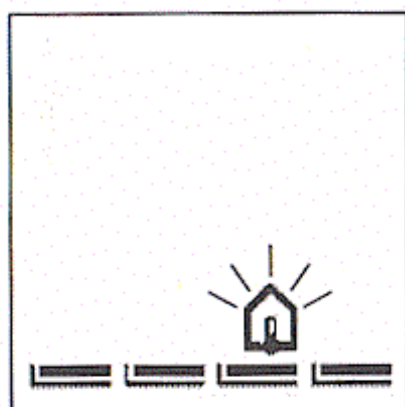





Select the sensors to be used for the heating system:

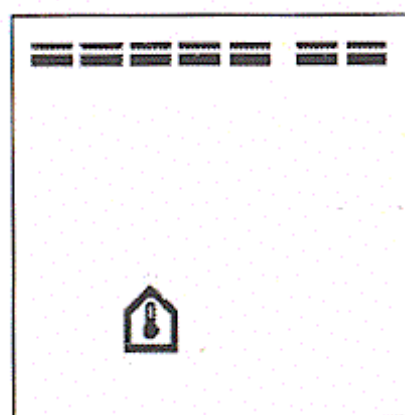
Devireg™ 535 is able to use two sensors:

- a built-in room sensor
- an external sensor to be placed in the floor.




This gives 3 options:

-  floor sensor.
-  room sensor.
-   both room and floor sensor.

The default is 

To change this setting, press ● and use the arrow buttons ▲▼ to select your choice. Press ● to accept your choice.

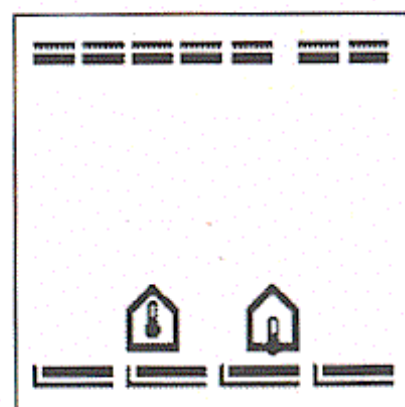

If you have selected room sensor only, the installation procedure is complete. Press installation button to accept. (Go to page 9)

If you have selected floor sensor or a combination of room- and floor sensor press ▲▼ for the next setting.