



Installation Guide

DEVIreg™ 330 (+60 °C to +160 °C)

Electronic Thermostat

Table of Contents

1	Introduction	3
1.1	Technical Specifications	4
1.2	Safety Instructions	5
2	Mounting Instructions	6
3	Warranty	8
4	Disposal Instruction	8

1 Introduction


DEVIreg™ 330 is an electronic thermostat to be installed in electric cabinets with DIN rail attachment. The thermostat must be installed via an all-pole disconnection switch. Either a wire sensor or an external air sensor must be used to measure and control the desired temperature.

The thermostat has a button to adjust the temperature setting, with a scale from +60 °C to +160 °C. An LED indicator shows standby periods (green light) and heating periods (red light).

**More information on this product can also be found at:
devi.com**

1.1 Technical Specifications

Operation voltage	220-240 V~, 50-60 Hz
Standby power consumption	Max 0,25 W
Relay: Resistive load Inductive load	Max 16 A / 3680 W @ 230 V cos φ = 0,3 max1A
Sensing units	NTC 16,7 kOhm at 100 °C
Sensing values: 25 °C 50 °C 100 °C 120 °C 170 °C	300 kOhm 99,4 kOhm 16,7 kOhm 8,8 kOhm 2,35 kOhm
Hysteresis	± 0,4 °C
Ambient temperature	10 °C to +50 °C
Temperature range	+60 °C to +160 °C
Cable specification max	1x4 mm ² or 2x2,5 mm ²
Ball pressure temperature	75 °C
Pollution degree	2 (domestic use)
Type	1C
Storage temperature	-20 °C to +65 °C

IP class	20
Protection class	Class II 
Dimensions	86 x 36 x 58 mm
Weight	83 g

The product complies with the EN/IEC Standard “Automatic electrical controls for household and similar use”:

- EN/IEC 60730-1 (general)
- EN/IEC 60730-2-9 (thermostat)

1.2 Safety Instructions

Make sure the mains supply to the thermostat is turned off before installation.

Please also note the following:

- The installation of the thermostat must be done by an authorized and qualified installer according to local regulations.
- The thermostat must be connected to a power supply via an all-pole disconnection switch.
- The sensor is to be considered as live voltage. Have this in mind if the sensor must be extended.
- Always connect the thermostat to continuous power supply.
- Do not expose the thermostat to moisture, water, dust, and excessive heat.

- If temperature wire sensor is applied on conductive surface it must be installed with additional electrical insulation.
- Caution: temperature sensor, heated surface and heating cable could have really high temperature.
- Sensor, conduit, fixing materials, etc. should be specified to be able to withstand temperatures applied by application.
- Caution: Temperature sensor with silicon cable should not be installed in concrete, aggressive and corrosive environment, etc.



2 Mounting Instructions

Please observe the following placement guidelines:

- Install the thermostat in an electric cabinet with DIN rail attachment or a separate DIN attachment according to local regulation on IP classes.
- Do not place the thermostat in a way that it will be exposed to direct sunlight.

Follow the steps below to mount the thermostat:

1. Click the thermostat on to the DIN rail attachment.
2. Connect the thermostat according to the connection diagram.

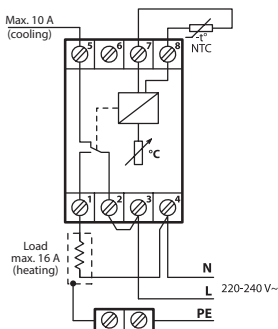

The screen of the heating cable must be connected to the earth conductor of the power supply cable by using a separate connector.

Note: When you use the wire sensor for floor heating, always install the sensor in a conduit.

3. Turn on the power supply.

3 **Warranty**



4 **Disposal Instruction**



Danfoss A/S

Nordborgvej 81
6430 Nordborg, Syddanmark
Denmark

Danfoss A/S
DEVI • devil.com • +45 7488 8500 • E-Mail: EH@danfoss.com


Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed.
All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.

DEVlreg™ 330 (+60 °C to +160 °C)

140F1073



Product Documentation

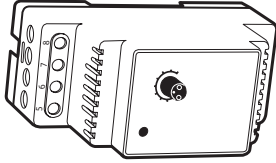

220-240V~
50-60Hz~
+60 to +160 °C
16A/3680W@230V~

DK EL 7224215328
SE EL 8581188
NO EL 5402664
FI SSTL 3531034

Designed in Denmark for Danfoss A/S

